


Benefits of Safe Plates are -

- Visual and physical deterrent from theft of number plates
- Conforms to regulations
- Simple to fit, no special tools required
- Each kit fits both existing front and rear plates
- Replaces existing fixings with no need to drill bodywork

INSTRUCTIONS FOR FITTING SAFE-PLATES™ SECURITY KITS

FOLLOW INSTRUCTIONS CAREFULLY

- Remove existing screws one at a time (using an appropriate screwdriver) so that number plate is held in location. CAUTION - if both are removed it can be difficult to align the new security screws through the existing number plate.
 - From packet carefully select the appropriate screw making sure that the type and size are the same. Self-tapping screws have a sharp pointed end and machine screws a blunt end.
 - Select relevant coloured base of security cap to match area of number plate where screw is to be fitted.
 - Place the new security screw through base cap making sure that the widest side is against the number plate.
 - Use a flat bladed screwdriver 7-8 mm wide (DO NOT USE POWER TOOLS) to fit screw through existing hole in number plate. Screwdriver must be square on to the screw head at all times and should only be tightened slowly a ½ turn at a time until both screw and base of cap are flat to number plate.
 - Place small matching coloured screw cover (dome facing outwards) into the large hole on security base cap and push firmly until it clicks and locks to hide screw head.
 - Repeat procedure as above for all screws being replaced on number plate.
 - 4 hours after fitting, the non-toxic coating on the screws expands to seal and prevent ingress of water into holes.
- CAUTION - Please dispose of packaging and old screws responsibly. (Keep out of reach and sight of children)

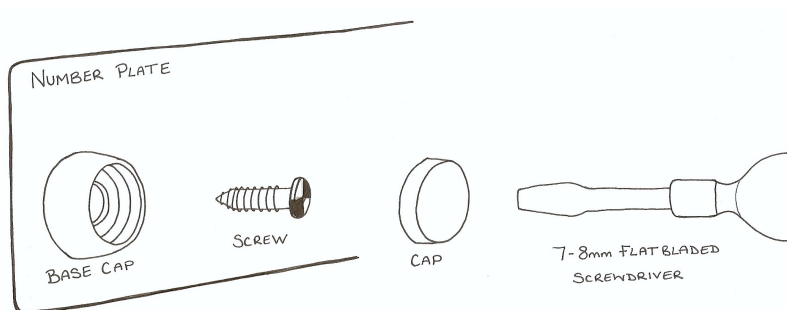

- 1** Alfa Romeo (all models)
Audi (all models)
Ford (all models)
Volvo (all models)
Volkswagen (all models)

- 2** Vauxhall (all models)

- 5** Citroen – C1 C2, C3, C4
Fiat (all models)
Freelander
Hyundai (all models)
Landrover
Mazda (all models)
Mitsubishi (all models)
Nissan (all models)
Peugeot (all models)
Rover
Seat (all models)
Skoda (all models)
Smart (all models)
Subaru (all models)
Suzuki (all models)

Check the table to see which pack is compatible to each vehicle

Fixings are made from High Quality Rust Resistant Stainless Steel to a unique design

- 3** Lexus (all models)
Toyota – Avensis, Hilux, Prius
RAV 4, Verso

- 4** BMW (all models inc Mini)
Citroen – C6, Berlingo, Relay,
Xsara Picasso,
Dispatch
Jaguar (all models)
Peugeot –Expert Van
Renault (all models)

- 6** Chrysler (all models)
Jeep (all models)

- 7** Mercedes (all models)

- 8** Toyota (all models except
Avensis, Hilux, Prius, RAV 4,
Verso)

- 9** Honda (all models)
Saab (all models)